


VEHICLE WIRING CIRCUIT FOR LUCAS 11AC ALTERNATOR SETS
 INCORPORATING THE 4TR CONTROL UNIT, AND 3AW CHARGING INDICATOR
 LIGHT CONTROL, FOR '-VE' EARTH SYSTEMS ONLY.
 SUITABLE FOR DIESEL OR PETROL ENGINED VEHICLES.

Note: This field lead must first go to terminal 'C2' on relay, and then to '+' terminal on regulator.

CABLE	B	U	N	R	P	G	W	Y
COLOUR	BLACK	BLUE	BROWN	RED	PURPLE	GREEN	WHITE	YELLOW
CODE								

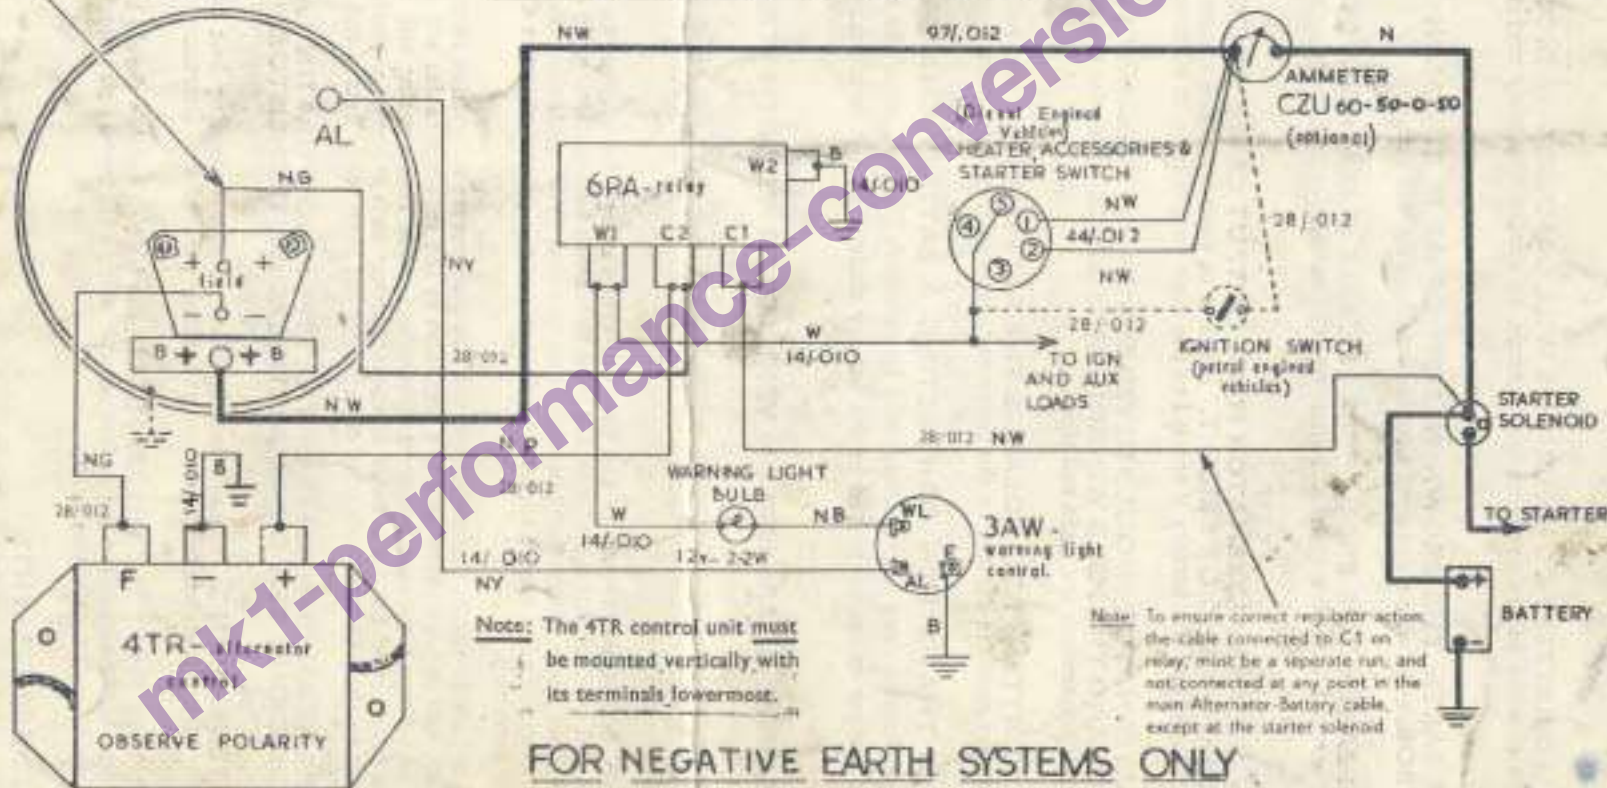

Note: The 4TR control unit must be mounted vertically with its terminals lowermost.

Note: To ensure correct regulator action, the cable connected to C1 on relay, must be a separate run, and not connected at any point in the main Alternator-Battery cable, except at the starter solenoid.

FOR NEGATIVE EARTH SYSTEMS ONLY