

***Be Seated by***

**RESTALL**  
MASTERFIT



**WITH A REAR PASSENGER SEAT**

**in your**

**AUSTIN**

**7 VAN**



**REAR PASSENGER SEAT SET  
FOR YOUR**

**AUSTIN 7 VAN**

*Here is the best of two worlds!*

Now you can have normal load carrying plus a really comfortable Two-passenger rear seat at such low cost.

Adequate head-room and also excellent leg space is provided.

**The necessary alterations to the vehicle are approved by the Austin Motor Company Ltd.**

**No Purchase Tax Obligations are involved.**

Current Trims are Tan and Green.

A.1180. A complete Kit - - - - - **£13 .15 .0**

Fitted at your Garage or our Works - - - - - **£20 . 0 . 0**

*You may also obtain the following accessories to enhance the comfort and usefulness of your van :*

C.1106 Roof **Luggage Rack**, Tubular, Strong - - - - - **£5 . 5 . 0**

B.1114 Front **Carpet** in Karvel (Brown) - - - - - **£4 . 0 . 0**

B.1116 Rear **Carpet** in Karvel with Heel Board Extension  
(Brown) - - - - - **£4 .15 . 0**





## SPECIFICATION

**A.1180 REAR PASSENGER FOLD INTO FLOOR SEAT SET**—Complete as a Kit, with all necessary Parts and Fitting Instructions, including attachment of spare wheel and battery to van walls in front of rear wheel arches. Part of floor to be removed to allow the seat to fold flush with original floor area.

Cushion and squab made in foam rubber supported by heavy plywood. The seating position allows maximum possible between cushion top and van roof.

*The Company reserves the right to make any alteration in the design or specification of any model without notice and to deliver goods conforming to the altered design or specification in fulfilment of any order.*



## FITTING INSTRUCTIONS

(as included in Seat Pack)

### A1180 REAR PASSENGER (CONVERSION) SEAT SET FOR AUSTIN 7 VAN & MORRIS MINI-MINOR VAN

- CUT AWAY PART OF EXISTING FLOOR.**
  - Place seat level with front of top floor and equalize for width.
  - Scribe line on top floor exactly at rear of seat.
  - Scribe line on top floor along seat side allowing  $\frac{1}{2}$ " extra each side.
- REMOVE BATTERY CARRIER AND SPARE WHEEL WEDGE.**
- FIT SIDE BOARDS (SUPPLIED) UNDER AND LEVEL WITH TOP FLOOR AS SHOWN.**
  - Ensure boards are at 90° to bottom floor.
  - Drill 3 holes in top floor each side, and secure each board with 3 No. 6 Pan Head Self tapping screws. (SUPPLIED).
  - Secure board brackets to bottom floor with No. 8 Self tapping screws. (SUPPLIED).
- FIT SEAT IN POSITION.**
  - Drill top floor to suit hinges and secure with metal thread screws and nuts. (SUPPLIED).
- BATTERY CARRIER.**
  - Fit battery carrier (SUPPLIED) as shown with 3 No. 8 Self tapping screws. (SUPPLIED).
- BATTERY CABLE.**
  - Lengthen battery cable by sweating on extension piece. (SUPPLIED).
  - Re-position cable under bottom floor and secure with clips. (SUPPLIED).
- SPARE WHEEL STRAP.**
  - Drill 4  $\frac{3}{16}$ " DIA. holes in body stiffeners as shown at 2" centres i.e. 10  $\frac{1}{2}$ " and 12  $\frac{1}{2}$ " up from top floor.

*The fitting of the above seat to the vehicle specified does not incur liability to Purchase Tax provided no other alterations are made to the body of the vehicle to equip the load space for passenger use.*

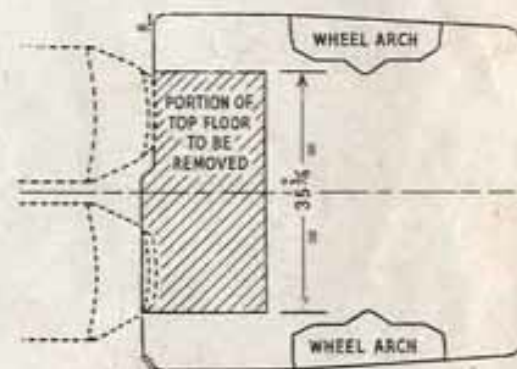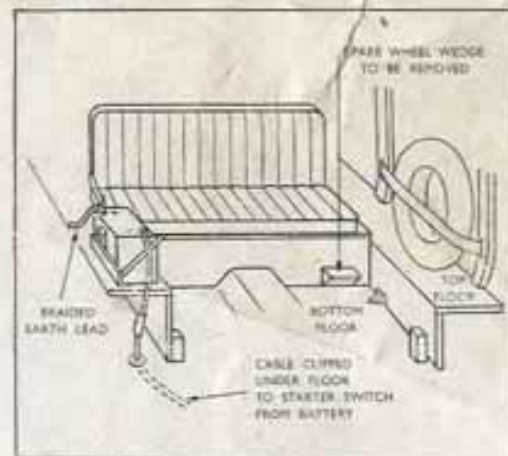

SKETCH PLAN OF VAN TOP FLOOR.

**RESTALL**  
MASTERFIT

VEHICLE SEATS

**RESTALL BROS. LIMITED**

31-33 FLOODGATE ST., BIRMINGHAM, 5

TELEPHONE VIC. 1693/4440